 


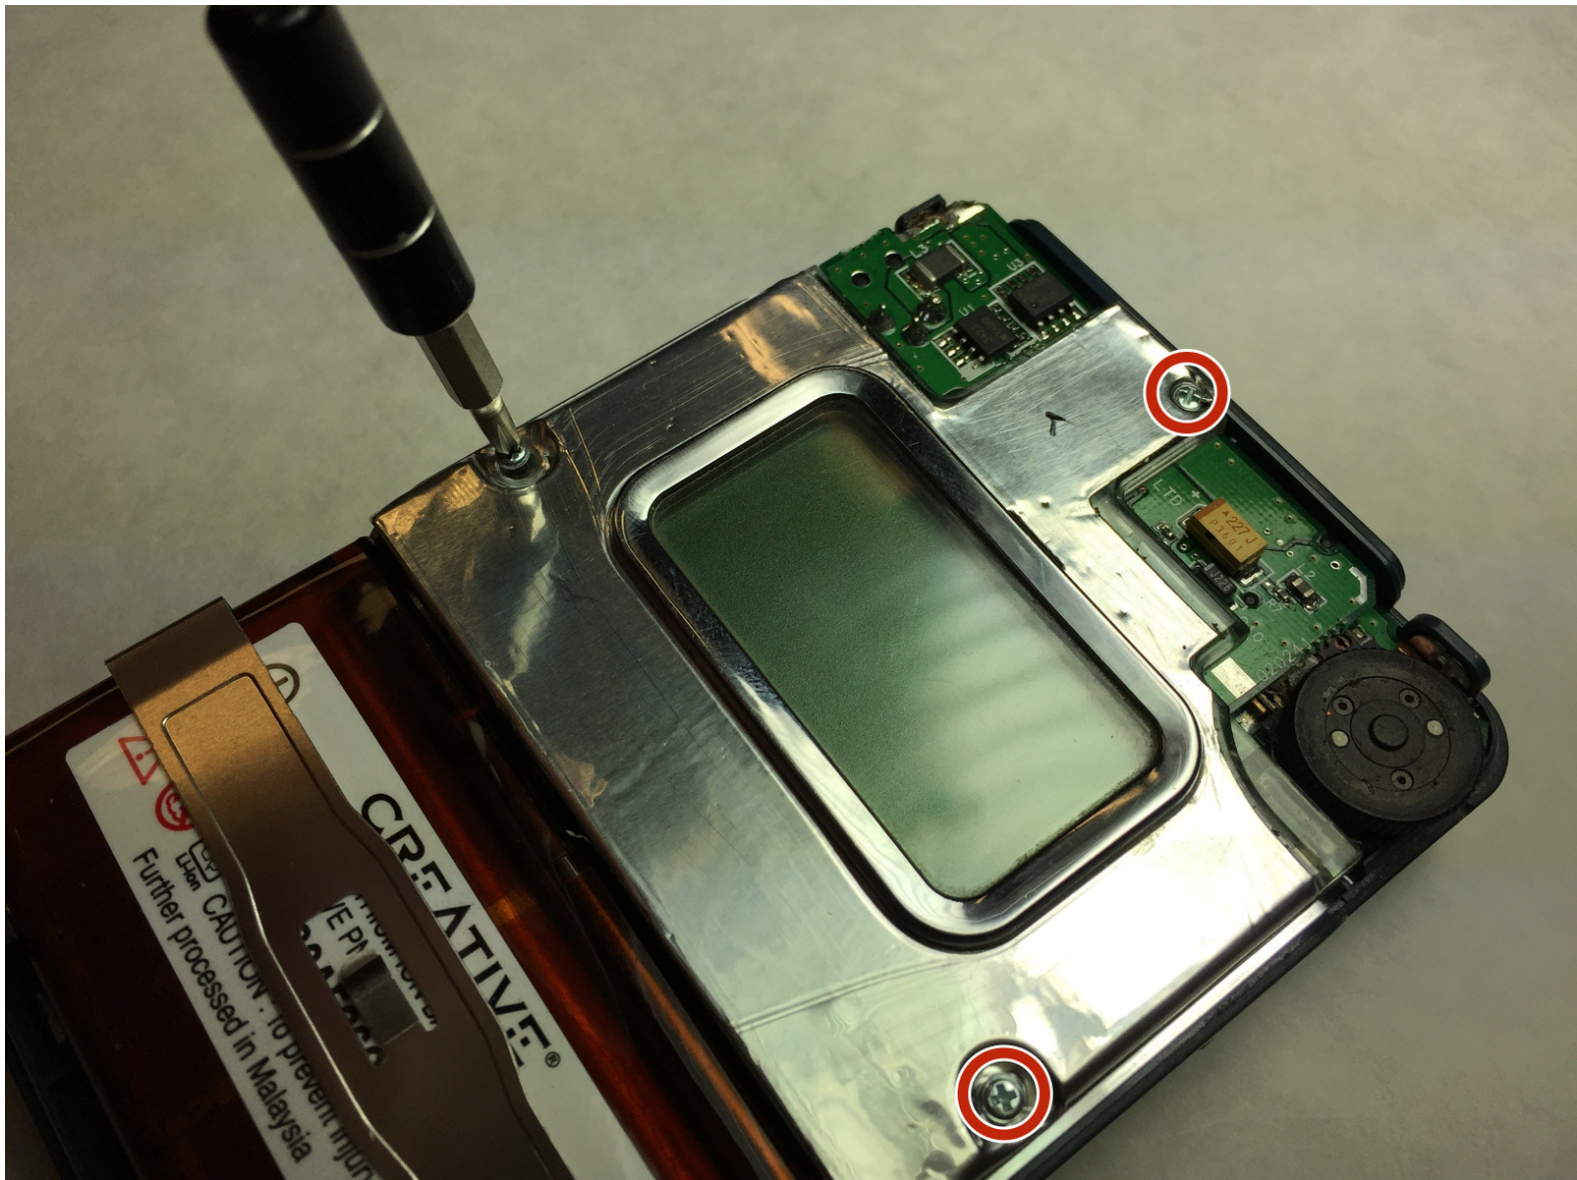

Creative Nomad Jukebox Zen Screen Cover Replacement

Has your Creative Nomad Jukebox Zen screen cover cracked or been scratched? This guide will show you how to replace it.

Written By: Eli Richter



INTRODUCTION

Hello! This guide will show you the steps to remove the screen cover in your Creative Nomad Jukebox Zen Device.



TOOLS:

- [JIS Driver Set](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Front and Back Cover



 
- Use a J0 screwdriver to remove the eight 3.5mm screws.

Step 2



- Use the plastic opening tool to open the top cover by carefully prying at each corner.

Step 3 — Screen Cover

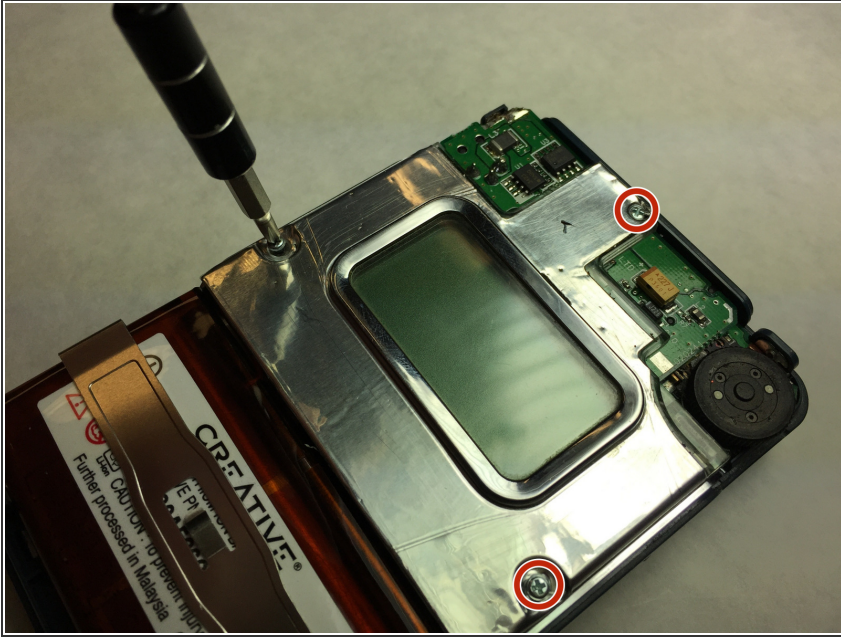

- Once the front face is removed, remove the three 6.8mm J0 screws from the metal cover and remove it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-25 12:31:07 AM.